mitex SI LED 1 x 8

Alphanumeric LED Display with Serial Interface

User's Manual

FEMA ELECTRÓNICA®

Distribuidor en España :
FEMA ELECTRÓNICA, SA
Pol. Ind. Santiga – Altimira 14 (T14 N2)
08210 Barberà del Vallès – BARCELONA
Tel. 93.729.6004 – info@fema.es
Fax 93.729.6003 – w w w .fema.es

microSYST Systemelectronic GmbH, Zur Centralwerkstätte 10, D-92637 Weiden, Germany
Tel. (+49-961) 3 91 66-0, Fax (+49-961) 3 91 66-10, www.microsyst.de, info@microsyst.de

Table of Contents

1 GENERAL 4

2 APPLICATIONS EXAMPLES 5

3 TECHNICAL DATA 6

3.1 Normal Operation 6

3.2 Start-Up Performance 7

3.3 Hardware and Software Self-Tests 8

3.4 Interfaces 9

3.5 Data Format 9

3.6 Frame Formats 9

3.7 Query Frame 10

3.8 Data Unit 11

3.9 Response Frame 13

4 CONNECTOR PIN ASSIGNMENTS 15

4.1 Display Elements 18

5 HOUSING DIMENSIONS 19

5.1 Installation / Mounting 20

6 APPENDIX 21

6.1 Standard Equipment 21

6.2 Optional Accessories 21

6.3 Order Numbers 21

6.4 Maintenance and Care 22

6.5 Declaration of Conformity 23

microSYST Systemelectronic GmbH, Zur Centralwerkstätte 10, D-92637 Weiden, Germany
Tel. (+49-961) 3 91 66-0, Fax (+49-961) 3 91 66-10, www.microsyst.de, info@microsyst.de

6.6 ASCII Character Set **24**

6.7 Guarantee **26**

6.8 Versions Overview **27**

microSYST Systemelectronic GmbH, Zur Centralwerkstätte 10, D-92637 Weiden, Germany
Tel. (+49-961) 3 91 66-0, Fax (+49-961) 3 91 66-10, www.microsyst.de, info@microsyst.de

1 General

This bus compatible LED monitor has been designed for industrial applications.

The display unit consists of an 8-digit dot matrix display with a character height of 17 or 30 mm. Each character is displayed with a resolution of 5 x 7 pixels.

Two serial interfaces are available for driving the display (RS 232 and RS 485).

Interface:
- Protocol is in compliance with Profibus
- Physical RS 232 / RS 485 interface

Display:
- Dot matrix with 5 x 7 pixels per digit
- 17 mm or 30 mm characters, 8 digits
- 4 brightness levels

Power Supply:
- 24 VDC, approx. 250 mA at full brightness
- Overvoltage protection, protected against pole reversal

Housing:
- DIN panel-mount housing, metal with special surface finish.

microSYST Systemelectronic GmbH, Zur Centralwerkstätte 10, D-92637 Weiden, Germany
Tel. (+49-961) 3 91 66-0, Fax (+49-961) 3 91 66-10, www.microsyst.de, info@microsyst.de

2 Applications Examples

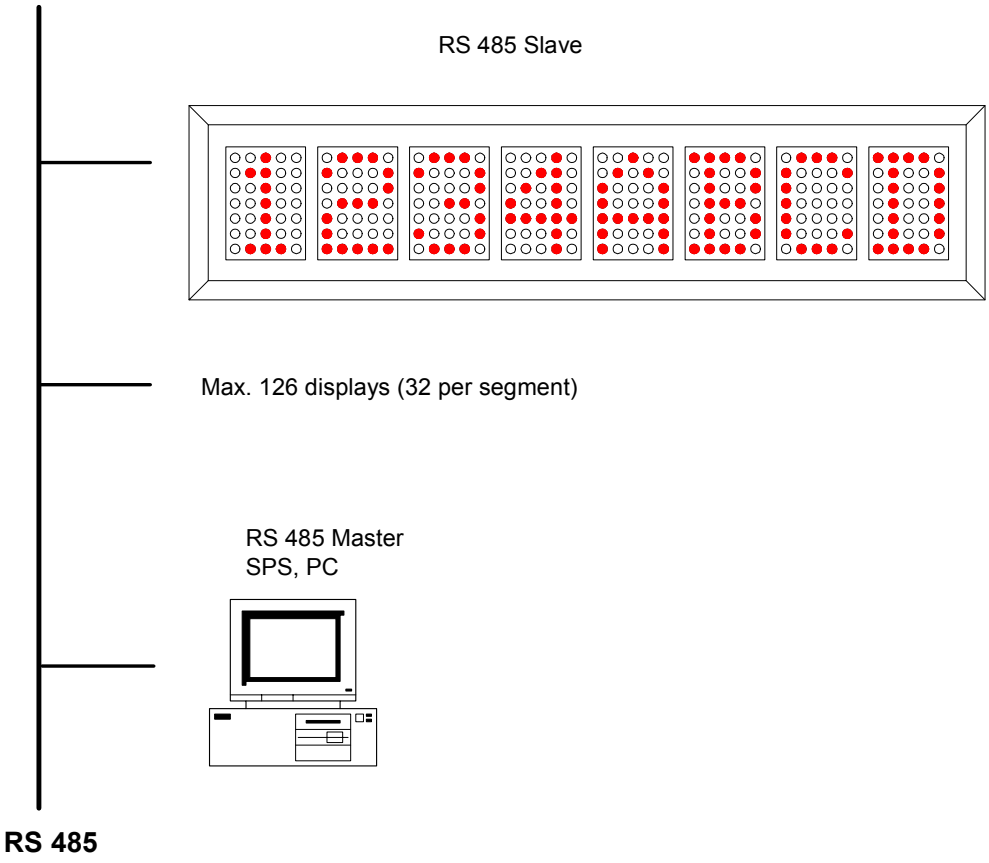

Note: RS 232 is not bus compatible. Only point-to-point connections can be established.

microSYST Systemelectronic GmbH, Zur Centralwerkstätte 10, D-92637 Weiden, Germany
Tel. (+49-961) 3 91 66-0, Fax (+49-961) 3 91 66-10, www.microsyst.de, info@microsyst.de

3 Technical Data

General Specifications

Display type:	LED dot matrix
Character height:	17 mm, 30 mm
Digits:	8
Resolution:	5 x 7 pixels per character
Display colour:	red, green
Operating voltage:	24 VDC +/- 20 %
Power consumption:	40 mA at idle 250 mA at full brightness
Interface:	serial, bus compatible RS 485, RS 232
Protocol:	ASCII
Baud rate:	2400, 4800, 9600, 19200 baud
Addresses:	0 to 127
Parities:	even, odd, none
Housing:	DIN panel-mount housing, metal with special surface finish
Housing dimensions:	see chapter 5
Mounting:	screw clamps
Protection:	front panel: IP54 or IP65
Operating temp.:	0 to + 45 °C
Storage temperature:	- 10 to + 60 °C
Humidity:	45 to 85 %

3.1 Normal Operation

Display data received via the communications interface appear at the dot matrix display. A character set of all displayable characters can be found in the appendix.

microSYST Systemelectronic GmbH, Zur Centralwerkstätte 10, D-92637 Weiden, Germany
Tel. (+49-961) 3 91 66-0, Fax (+49-961) 3 91 66-10, www.microsyst.de, info@microsyst.de

3.2 Start-Up Performance

The following steps are performed after supply power has been connected to the display:

- Hardware test and setpoint value initialisation: This step takes about 0.6 seconds.

Serial communication is inactive during this time.

- Display test: This step takes about 6 seconds, and all pixels from either 1 or two digits are displayed per second at maximum brightness (100 %).

  Serial communications are active during this time.

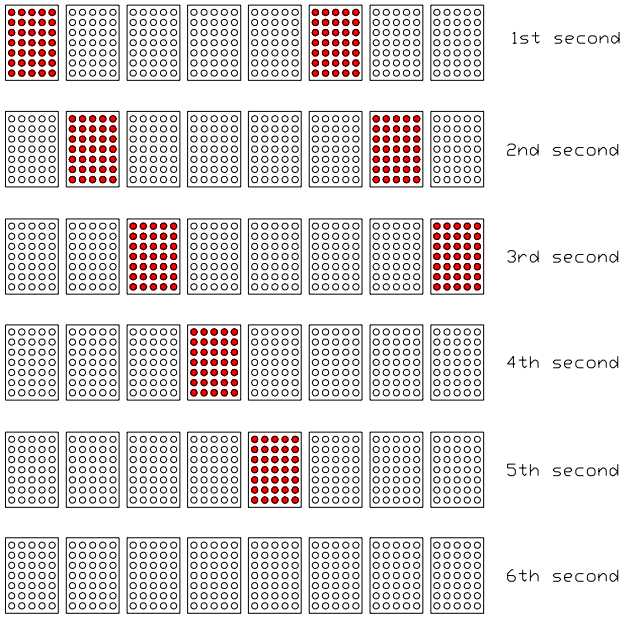

microSYST Systemelectronic GmbH, Zur Centralwerkstätte 10, D-92637 Weiden, Germany
Tel. (+49-961) 3 91 66-0, Fax (+49-961) 3 91 66-10, www.microsyst.de, info@microsyst.de

3.3 Hardware and Software Self-Tests

After the display has been connected to power, and if the test mode DIP switch has been activated, the following steps are performed:

The hardware is tested and the register is initialised. The address is displayed for the first second. The entire character set from ASCII code 00H through 7FH is then displayed.

The ASCII code is displayed at digits 1 and 2, and the corresponding character appears at the following digit. After 1 second, the ASCII code is increased by 2.

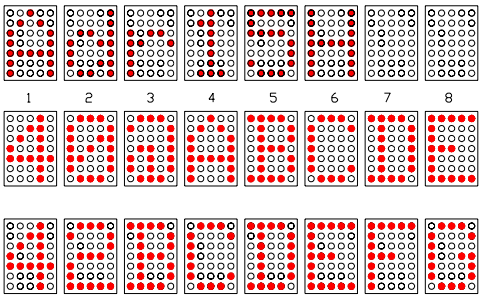

microSYST Systemelectronic GmbH, Zur Centralwerkstätte 10, D-92637 Weiden, Germany
Tel. (+49-961) 3 91 66-0, Fax (+49-961) 3 91 66-10, www.microsyst.de, info@microsyst.de

3.4 Interfaces

A transmission speed can be selected with the DIP switches.

One of the following baud rates can be selected:

- 2 400 baud
- 4 800 baud
- 9 600 baud
- 19 200 baud.

3.5 Data Format

The data format can be selected with the DIP switches. The following formats are possible:

- 1 start bit, 8 data bits, 1 parity bit (even), 1 stop bit
- 1 start bit, 8 data bits, 1 parity bit (odd), 1 stop bit
- 1 start bit, 8 data bits, 1 stop bit
- 1 start bit, 8 data bits, 2 stop bits.

3.6 Frame Formats

The frame formats are in compliance with the Profibus standard with the following limitations:

- Synchronisation time SYN (33 bits) is not tested in its full length.
- Only frames included in the **S**ende**D**ienst **2** group (SD2, variable length) are recognised.
- Only SDN and SRD services are used.
- **S**ervice **A**ccess **P**oints are not used for addressing.

microSYST Systemelectronic GmbH, Zur Centralwerkstätte 10, D-92637 Weiden, Germany
Tel. (+49-961) 3 91 66-0, Fax (+49-961) 3 91 66-10, www.microsyst.de, info@microsyst.de

3.7 Query Frame

Frame Header 7 bytes							DATA_UNIT 12 bytes	Frame Trail 2 bytes	
SD2	**LE**	**LEr**	**SD2**	**DA**	**SA**	**FC**	**DATA_UNIT**	**FCS**	**ED**
				Σ = FCS					

Frame Header

SD2	Start byte 2 (start delimiter), code = 68H
LE	Length byte, value = 0FH (DA, SA, FC, DATA_UNIT ⇒ corresponds to 15 bytes =0FH)
LEr	Repeat length byte
SD2	Start byte 2 (start delimiter), code = 68H
DA	Destination address byte ⇒ address display
SA	Source address byte ⇒ address computer = 00H
FC	Frame control byte = 7CH

Data Unit

DATA_UNIT	Data Field

Frame Trail

FCS	Frame check sequence = low byte from addition of DA, SA, FC, DATA_UNIT
ED	End byte (end delimiter), code 16H

Broadcast address “7FH” enables the simultaneous clearing of all displays.

microSYST Systemelectronic GmbH, Zur Centralwerkstätte 10, D-92637 Weiden, Germany
Tel. (+49-961) 3 91 66-0, Fax (+49-961) 3 91 66-10, www.microsyst.de, info@microsyst.de

3.8 Data Unit

Ctrl1	Ctrl2	Strb1	Strb2	D1	D2	D3	D4	D5	D6	D7	D8

Ctrl1: control byte 1: reserved, must be set to 00 H
Ctrl2: control byte 2: reserved, must be set to 00 H

Strb1: Control Byte 1: Brightness Setting (4 levels), Self-Test

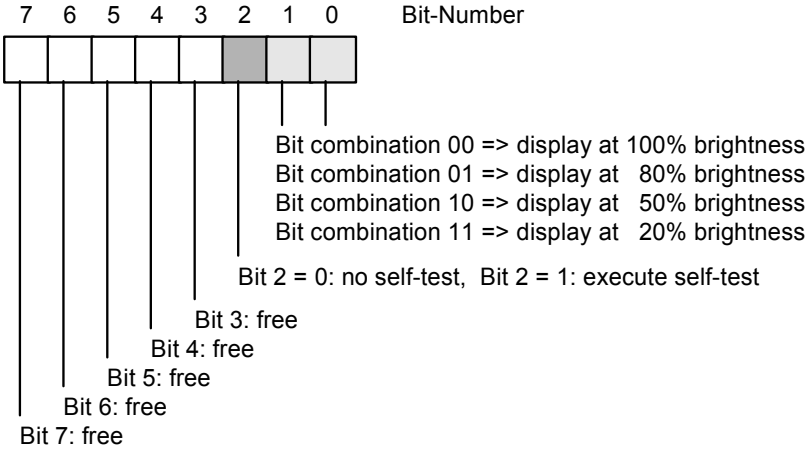
7 6 5 4 3 2 1 0
Bit-Number
Bit combination 00 => display at 100% brightness
Bit combination 01 => display at 80% brightness
Bit combination 10 => display at 50% brightness
Bit combination 11 => display at 20% brightness
Bit 2 = 0: no self-test, Bit 2 = 1: execute self-test
Bit 3: free
Bit 4: free
Bit 5: free
Bit 6: free
Bit 7: free

microSYST Systemelectronic GmbH, Zur Centralwerkstätte 10, D-92637 Weiden, Germany
Tel. (+49-961) 3 91 66-0, Fax (+49-961) 3 91 66-10, www.microsyst.de, info@microsyst.de

Strb2: Control Byte 2: Blinking

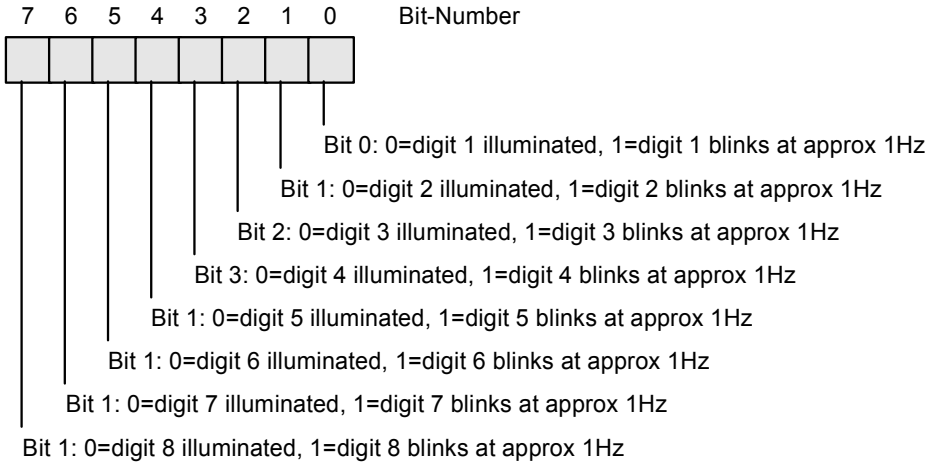
7 6 5 4 3 2 1 0
Bit-Number
Bit 0: 0=digit 1 illuminated, 1=digit 1 blinks at approx 1Hz
Bit 1: 0=digit 2 illuminated, 1=digit 2 blinks at approx 1Hz
Bit 2: 0=digit 3 illuminated, 1=digit 3 blinks at approx 1Hz
Bit 3: 0=digit 4 illuminated, 1=digit 4 blinks at approx 1Hz
Bit 1: 0=digit 5 illuminated, 1=digit 5 blinks at approx 1Hz
Bit 1: 0=digit 6 illuminated, 1=digit 6 blinks at approx 1Hz
Bit 1: 0=digit 7 illuminated, 1=digit 7 blinks at approx 1Hz
Bit 1: 0=digit 8 illuminated, 1=digit 8 blinks at approx 1Hz

The blink function is active as long as the bit is set.

- D1: display data in ASCII code for digit 1
- D2: display data in ASCII code for digit 2
- D3: display data in ASCII code for digit 3
- D4: display data in ASCII code for digit 4
- D5: display data in ASCII code for digit 5
- D6: display data in ASCII code for digit 6
- D7: display data in ASCII code for digit 7
- D8: display data in ASCII code for digit 8.

In order to clear all of the digits at the display, the 8 display data in the data frame (D1 through D8) must contain the blank character “20H”. Digit 1 is all the way to the left.

microSYST Systemelectronic GmbH, Zur Centralwerkstätte 10, D-92637 Weiden, Germany
Tel. (+49-961) 3 91 66-0, Fax (+49-961) 3 91 66-10, www.microsyst.de, info@microsyst.de

3.9 Response Frame

The response frame has the following format:

Frame Header 7 Byte							DATA_UNIT 2 Byte		Frame Trail 2 Byte	
SD2	LE	LEr	SD2r	DA	SA	FC			CHK	ED

Frame Header

SD2	Start byte 2 (start delimiter), code = 68H
LE	Length byte, value = 05H (DA, SA, FC, DATA_UNIT ⇒ corresponds to 5 bytes = 05H)
LEr	Repeat length byte
SD2	Start byte 2 (start delimiter), code = 68H
DA	Destination address byte ⇒ address computer = 00H
SA	Source address byte ⇒ address display
FC	Frame control byte = 08H

Data Unit

DATA_UNIT	Data field ⇒ status byte 1, status byte 2

Frame Trail

FCS	Frame check sequence = low byte from addition of DA, SA, FC, DATA_UNIT
ED	End byte (end delimiter), code 16H.

microSYST Systemelectronic GmbH, Zur Centralwerkstätte 10, D-92637 Weiden, Germany
Tel. (+49-961) 3 91 66-0, Fax (+49-961) 3 91 66-10, www.microsyst.de, info@microsyst.de

Status Byte 1:

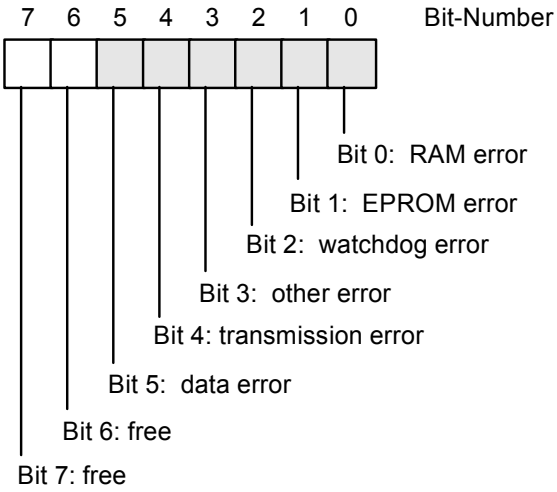

Status Byte 2: is reserved. Its content corresponds to the content of status byte 1.

Example:

Query frame from the master, address 07H:

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21
68	0F	0F	68	07	00	7C	00	00	00	00	31	32	33	34	35	36	37	38	27	16

Response frame for faultless transmission:

1	2	3	4	5	6	7	8	9	10	11
68	05	05	68	00	07	08	00	00	0F	16

1, 2, 3, 4, 5, 6, 7 and 8 are displayed at full brightness without blinking.

microSYST Systemelectronic GmbH, Zur Centralwerkstätte 10, D-92637 Weiden, Germany
Tel. (+49-961) 3 91 66-0, Fax (+49-961) 3 91 66-10, www.microsyst.de, info@microsyst.de

4 Connector Pin Assignments

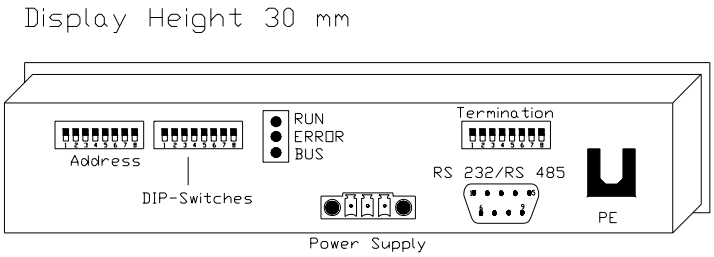

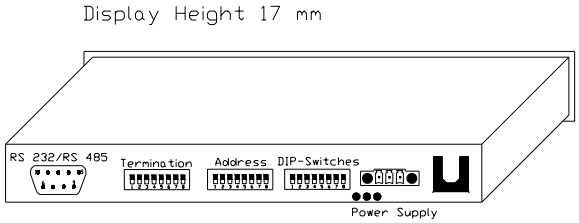

9-Pin Sub-Miniature Plug Connector



Pin	RS 232	RS 485
1	n.c.	n.c.
2	RxD	n.c.
3	TxD	B strand
4	n.c.	n.c.
5	GND ext	GND ext
6	n.c.	+5V ext
7	n.c.	n.c.
8	n.c.	A strand
9	n.c.	n.c.

microSYST Systemelectronic GmbH, Zur Centralwerkstätte 10, D-92637 Weiden, Germany
Tel. (+49-961) 3 91 66-0, Fax (+49-961) 3 91 66-10, www.microsyst.de, info@microsyst.de

3-Pole Terminal Block



Pin	Power Supply
1	+ 24 VDC
2	GND
3	PE

Triple LED Monitor

LED Monitor		
1	Run LED	Normal operation: blinks at approx. 1 Hz
2	Error LED	Normal operation: active when bus error occurs
3	Bus LED	Normal operation: active during bus transmission

8-Fold DIP Switch Array (Address)



Address		ON	OFF
DIP 1	DP address: 2^0	1_D	0
DIP 2	DP address: 2^1	2_D	0
DIP 3	DP address: 2^2	4_D	0
DIP 4	DP address: 2^3	8_D	0
DIP 5	DP address: 2^4	16_D	0
DIP 6	DP address: 2^5	32_D	0
DIP 7	DP address: 2^6	64_D	0
DIP 8	n.c.	-	-

microSYST Systemelectronic GmbH, Zur Centralwerkstätte 10, D-92637 Weiden, Germany
Tel. (+49-961) 3 91 66-0, Fax (+49-961) 3 91 66-10, www.microsyst.de, info@microsyst.de

8-Fold DIP Switch Array



DIP 1	DIP 2	DIP 3	Function
1	0	0	2400 Baud
0	1	0	4800 Baud
1	1	0	9600 Baud
0	0	1	19200 Baud

If DIP switches 1 through 3 are configured to any other setting, a baud rate of 9600 is used.

DIP	ON	OFF	Comment
4	Use parity bit	Don't use parity bit	
5	Even parity	Odd parity	DIP 5 is only taken into consideration if DIP 4 is set to ON.
6	2 stop bits	1 stop bit	
7	n.c.	n.c.	
8	Test mode	Normal operation	

8-Fold DIP Switch Array (Termination)

Termination	1	2	3	4	5	6	7	8
RS 485 without bus terminator	OFF	OFF	ON	ON	ON	OFF	OFF	OFF
RS 485 with bus terminator	ON	ON	ON	ON	ON	OFF	OFF	OFF
RS 232	OFF	OFF	OFF	OFF	OFF	ON	ON	ON

microSYST Systemelectronic GmbH, Zur Centralwerkstätte 10, D-92637 Weiden, Germany
Tel. (+49-961) 3 91 66-0, Fax (+49-961) 3 91 66-10, www.microsyst.de, info@microsyst.de

4.1 Display Elements

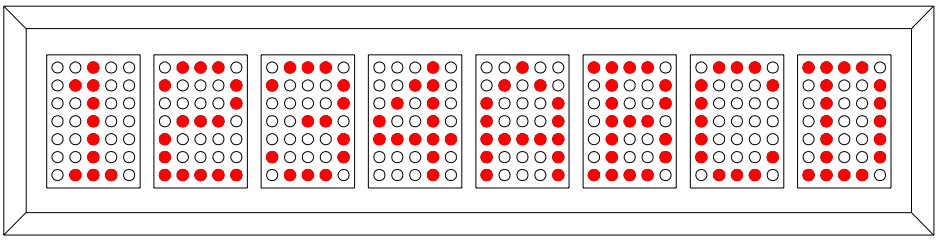

Components	Function / Description
Display:	5 x 7 dot matrix display
Character Height:	30 mm, 17 mm
Number of Characters:	1
Digits:	8
Display Colour:	red, green, 4 brightness levels
Display:	ASCII character set

microSYST Systemelectronic GmbH, Zur Centralwerkstätte 10, D-92637 Weiden, Germany
Tel. (+49-961) 3 91 66-0, Fax (+49-961) 3 91 66-10, www.microsyst.de, info@microsyst.de

5 Housing Dimensions

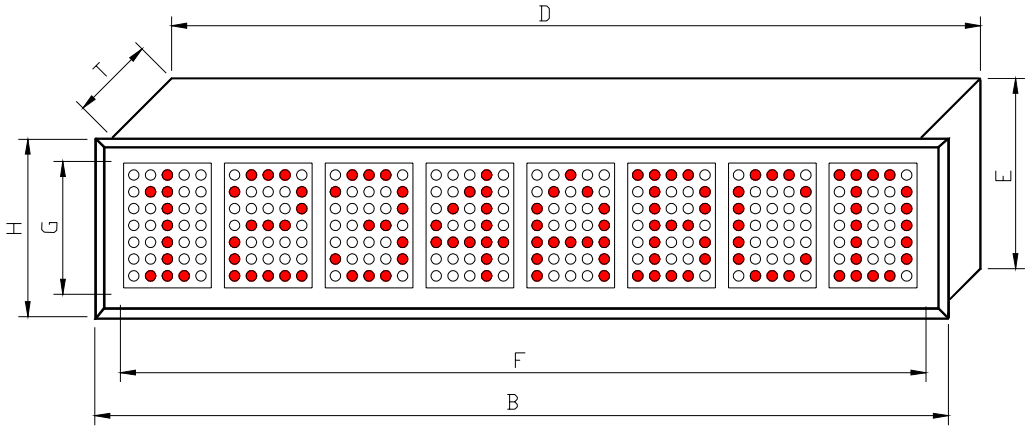

Char. Height G	F	B	H	D	E	T
17	138	168	24	164	20	61
30	225	264	48	254	40	40

All dimensions in mm

.

microSYST Systemelectronic GmbH, Zur Centralwerkstätte 10, D-92637 Weiden, Germany
Tel. (+49-961) 3 91 66-0, Fax (+49-961) 3 91 66-10, www.microsyst.de, info@microsyst.de

5.1 Installation / Mounting

The display has been designed for mounting to a panel. The tabs provided to this end are bent up to enable fastening of the clamps after the device has been inserted.

A rubber gasket seals the device's front panel against the control panel (IP65).

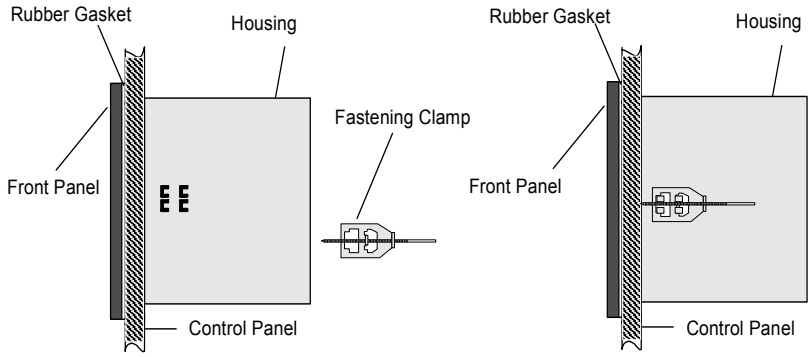

microSYST Systemelectronic GmbH, Zur Centralwerkstätte 10, D-92637 Weiden, Germany
Tel. (+49-961) 3 91 66-0, Fax (+49-961) 3 91 66-10, www.microsyst.de, info@microsyst.de

6 Appendix

6.1 Standard Equipment

- Display with current software and hardware versions
- Mounting materials (screw clamps M4)
- Mating plug for power supply
- User's manual.

6.2 Optional Accessories

- User's manual, A4 format (German or English)
- Mounting materials (screw clamps M2,5)
- Replacement plug for power supply.

6.3 Order Numbers

Designation	Order Number
mitex SI LED 1x8 17 mm	KSI5LE2-JA121763-000
mitex SI LED 1x8 30 mm	KSI5LE2-MA121863-000
User’s manual, German	X-M21-2LE15X-001
User’s manual English	X-M22-2LE15X-001
Mounting materials screw clamps M2,5	G-S-023
3-pole socket connector	M-B-B-E-3-003

microSYST Systemelectronic GmbH, Zur Centralwerkstätte 10, D-92637 Weiden, Germany
Tel. (+49-961) 3 91 66-0, Fax (+49-961) 3 91 66-10, www.microsyst.de, info@microsyst.de

6.4 Maintenance and Care

Observe the following instructions in order to assure best possible performance of the display:

- Never cover ventilation slots (if included) or the air inlet, because this blocks the flow of air. When installing the device, be sure to allow for adequate clearance at the back, front and top to assure sufficient ventilation.
- If included, clean the ventilation slots at the back, front and top from time to time.
- The display must be switched off before cleaning.
- Protect the display from excessive humidity, extreme vibration, direct sunlight and extreme temperatures. Non-observance may lead to malfunctioning or destruction of the device. Under certain circumstances electrical shock, fire and explosion may occur as well. Information concerning allowable ambient conditions, including recommended temperature and atmospheric humidity ranges, can be found in the chapter entitled “Technical Data”
- The display may not be placed into service if the device and/or the power cable are known to be damaged.
- Do not attempt to open or repair the device yourself. The guarantee is rendered null and void if the device is tampered with by unauthorised persons.

microSYST Systemelectronic GmbH, Zur Centralwerkstätte 10, D-92637 Weiden, Germany
Tel. (+49-961) 3 91 66-0, Fax (+49-961) 3 91 66-10, www.microsyst.de, info@microsyst.de

6.5 Declaration of Conformity

microSYST Systemelectronic GmbH, Zur Centralwerkstätte 10, 92637 Weiden, Germany

does hereby declare
that the product described in this user's manual,

“mitex SI”

to which this declaration makes due reference,
is in compliance with the following standards or normative documents:

Interference emission: generic standard EN 50081 - 1, issued July 1993
Product standard: EN 55011; group 1/2; class A, issued March 1991
Limit values identical to EN 55022

Interference immunity: generic standard EN 50082 - 2, issued March 1995
Basic specification per table

In accordance with regulations specified by guideline 89/336/ EWG (and EMVG).

Weiden, 16 June 1999 microSYST Systemelectronic GmbH

microSYST Systemelectronic GmbH, Zur Centralwerkstätte 10, D-92637 Weiden, Germany
Tel. (+49-961) 3 91 66-0, Fax (+49-961) 3 91 66-10, www.microsyst.de, info@microsyst.de

6.6 ASCII Character Set

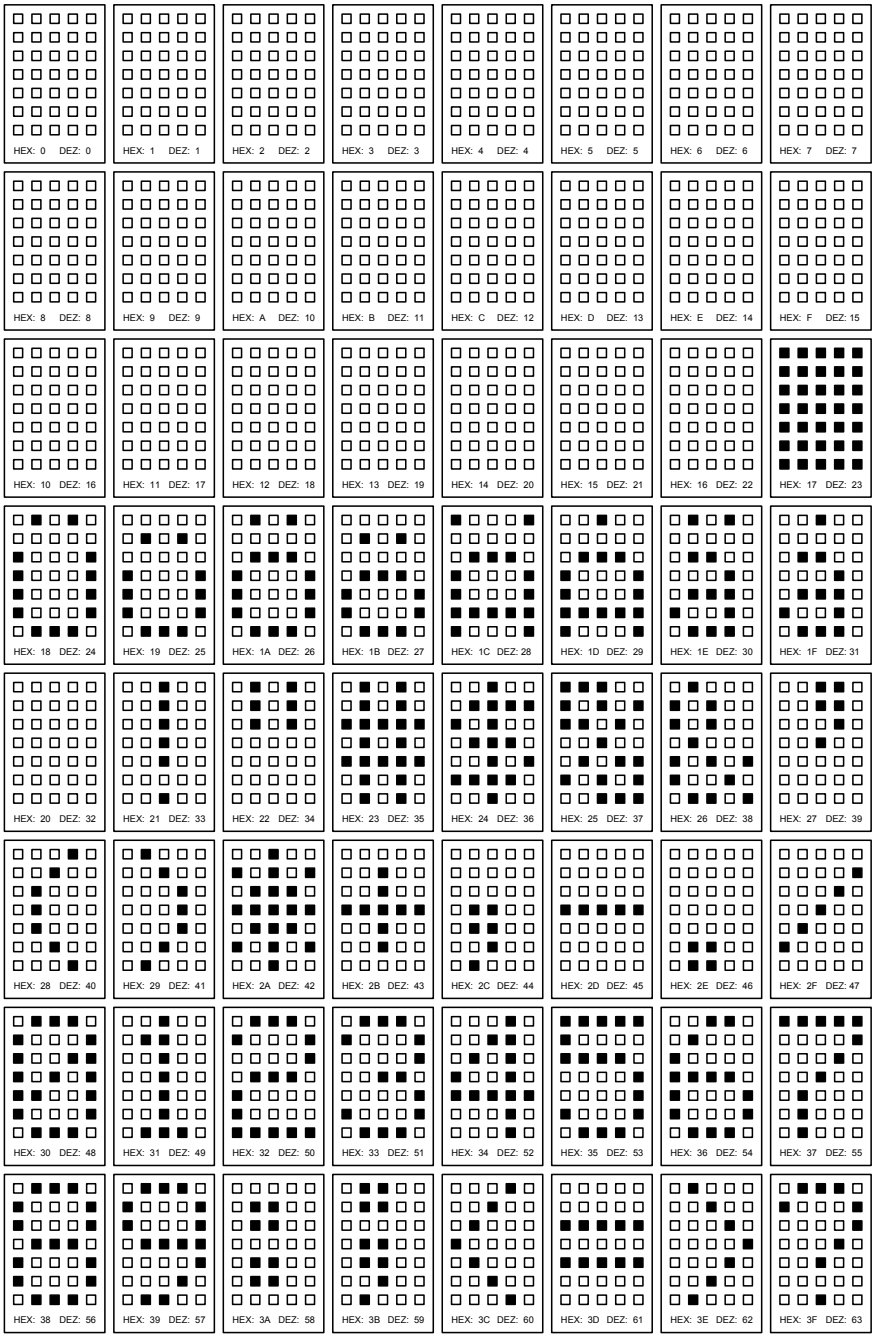
HEX: 0 DEZ: 0
HEX: 1 DEZ: 1
HEX: 2 DEZ: 2
HEX: 3 DEZ: 3
HEX: 4 DEZ: 4
HEX: 5 DEZ: 5
HEX: 6 DEZ: 6
HEX: 7 DEZ: 7
HEX: 8 DEZ: 8
HEX: 9 DEZ: 9
HEX: A DEZ: 10
HEX: B DEZ: 11
HEX: C DEZ: 12
HEX: D DEZ: 13
HEX: E DEZ: 14
HEX: F DEZ: 15
HEX: 10 DEZ: 16
HEX: 11 DEZ: 17
HEX: 12 DEZ: 18
HEX: 13 DEZ: 19
HEX: 14 DEZ: 20
HEX: 15 DEZ: 21
HEX: 16 DEZ: 22
HEX: 17 DEZ: 23
HEX: 18 DEZ: 24
HEX: 19 DEZ: 25
HEX: 1A DEZ: 26
HEX: 1B DEZ: 27
HEX: 1C DEZ: 28
HEX: 1D DEZ: 29
HEX: 1E DEZ: 30
HEX: 1F DEZ: 31
HEX: 20 DEZ: 32
HEX: 21 DEZ: 33
HEX: 22 DEZ: 34
HEX: 23 DEZ: 35
HEX: 24 DEZ: 36
HEX: 25 DEZ: 37
HEX: 26 DEZ: 38
HEX: 27 DEZ: 39
HEX: 28 DEZ: 40
HEX: 29 DEZ: 41
HEX: 2A DEZ: 42
HEX: 2B DEZ: 43
HEX: 2C DEZ: 44
HEX: 2D DEZ: 45
HEX: 2E DEZ: 46
HEX: 2F DEZ: 47
HEX: 30 DEZ: 48
HEX: 31 DEZ: 49
HEX: 32 DEZ: 50
HEX: 33 DEZ: 51
HEX: 34 DEZ: 52
HEX: 35 DEZ: 53
HEX: 36 DEZ: 54
HEX: 37 DEZ: 55
HEX: 38 DEZ: 56
HEX: 39 DEZ: 57
HEX: 3A DEZ: 58
HEX: 3B DEZ: 59
HEX: 3C DEZ: 60
HEX: 3D DEZ: 61
HEX: 3E DEZ: 62
HEX: 3F DEZ: 63

Continued on next page

microSYST Systemelectronic GmbH, Zur Centralwerkstätte 10, D-92637 Weiden, Germany
Tel. (+49-961) 3 91 66-0, Fax (+49-961) 3 91 66-10, www.microsyst.de, info@microsyst.de

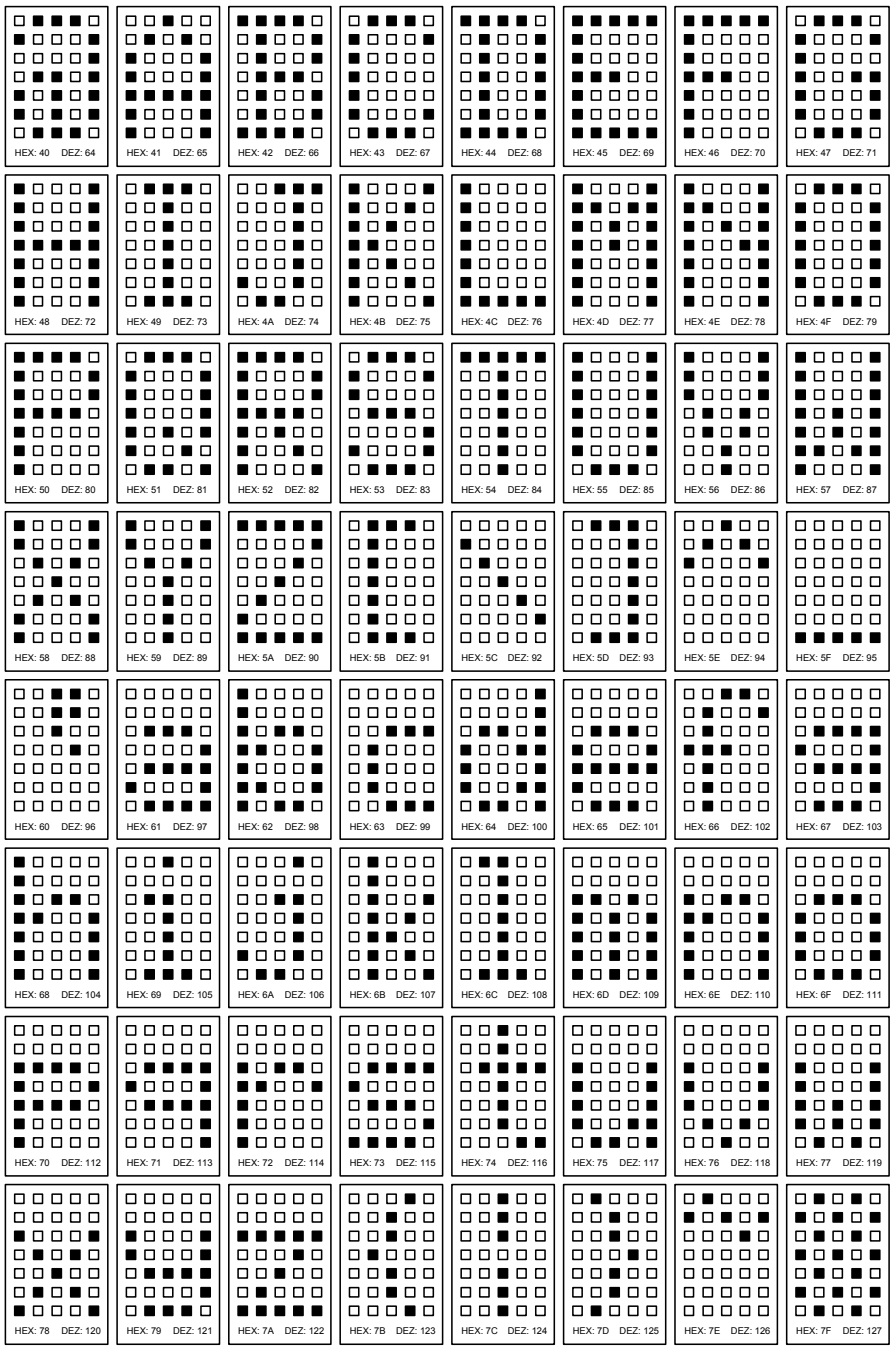
HEX: 40 DEZ: 64
HEX: 41 DEZ: 65
HEX: 42 DEZ: 66
HEX: 43 DEZ: 67
HEX: 44 DEZ: 68
HEX: 45 DEZ: 69
HEX: 46 DEZ: 70
HEX: 47 DEZ: 71
HEX: 48 DEZ: 72
HEX: 49 DEZ: 73
HEX: 4A DEZ: 74
HEX: 4B DEZ: 75
HEX: 4C DEZ: 76
HEX: 4D DEZ: 77
HEX: 4E DEZ: 78
HEX: 4F DEZ: 79
HEX: 50 DEZ: 80
HEX: 51 DEZ: 81
HEX: 52 DEZ: 82
HEX: 53 DEZ: 83
HEX: 54 DEZ: 84
HEX: 55 DEZ: 85
HEX: 56 DEZ: 86
HEX: 57 DEZ: 87
HEX: 58 DEZ: 88
HEX: 59 DEZ: 89
HEX: 5A DEZ: 90
HEX: 5B DEZ: 91
HEX: 5C DEZ: 92
HEX: 5D DEZ: 93
HEX: 5E DEZ: 94
HEX: 5F DEZ: 95
HEX: 60 DEZ: 96
HEX: 61 DEZ: 97
HEX: 62 DEZ: 98
HEX: 63 DEZ: 99
HEX: 64 DEZ: 100
HEX: 65 DEZ: 101
HEX: 66 DEZ: 102
HEX: 67 DEZ: 103
HEX: 68 DEZ: 104
HEX: 69 DEZ: 105
HEX: 6A DEZ: 106
HEX: 6B DEZ: 107
HEX: 6C DEZ: 108
HEX: 6D DEZ: 109
HEX: 6E DEZ: 110
HEX: 6F DEZ: 111
HEX: 70 DEZ: 112
HEX: 71 DEZ: 113
HEX: 72 DEZ: 114
HEX: 73 DEZ: 115
HEX: 74 DEZ: 116
HEX: 75 DEZ: 117
HEX: 76 DEZ: 118
HEX: 77 DEZ: 119
HEX: 78 DEZ: 120
HEX: 79 DEZ: 121
HEX: 7A DEZ: 122
HEX: 7B DEZ: 123
HEX: 7C DEZ: 124
HEX: 7D DEZ: 125
HEX: 7E DEZ: 126
HEX: 7F DEZ: 127

microSYST Systemelectronic GmbH, Zur Centralwerkstätte 10, D-92637 Weiden, Germany
Tel. (+49-961) 3 91 66-0, Fax (+49-961) 3 91 66-10, www.microsyst.de, info@microsyst.de

6.7 Guarantee

The display is guaranteed for the duration of the legally specified period against defects which existed at the time the device was delivered to the buyer.

The device is subject to technical change without notice. Errors and omissions are excepted. No claims can be honoured for the shipment of a new product. The buyer is required to make notification of defects within 2 weeks after identification of such. Non-observance of notification requirements is equated with acceptance of the defect.

Defects and their symptoms must be described as accurately as possible in order to allow for reproducibility and elimination. The buyer must provide for access to all required and/or useful information regarding defects at no charge, as well as to the affected devices, and must make all of the required data and machine time available free of charge.

The guarantee does not cover defects which result from non-observance of the prescribed conditions of use, or from improper handling.

If the device has been placed at the disposal of the buyer for test purposes and has been purchased subsequent to such testing, both parties agree that the product is to be considered "used" and that it has been purchased "as is". No guarantee claims may be made in such cases.

The “General Terms and Conditions” regarding manufactured products and services rendered for the electrical industry apply as well.

microSYST Systemelectronic GmbH, Zur Centralwerkstätte 10, D-92637 Weiden, Germany
Tel. (+49-961) 3 91 66-0, Fax (+49-961) 3 91 66-10, www.microsyst.de, info@microsyst.de

6.8 Versions Overview

Ver.	Date	Comments, Description
1.00	6/16/99	
1.10	12/13/01	Kreuzer: Layout
1.20	12/16/02	Kreuzer: New logo

microSYST Systemelectronic GmbH, Zur Centralwerkstätte 10, D-92637 Weiden, Germany
Tel. (+49-961) 3 91 66-0, Fax (+49-961) 3 91 66-10, www.microsyst.de, info@microsyst.de